



## **JDDX2R**

### Eliminating Pops and Crackles

It is possible that pops and clicks persist if the fader is connected last in the chain.

Firstly, try unplugging the cable out from the turntable, then plug it back in.

If that does not work - follow the below procedure in sequential steps.

1. DISCONNECT ALL CABLES AND TURN OFF TURNTABLE
2. TURN ON TURNTABLE
3. PLUG OUTPUT CABLE INTO FADER
4. PLUG OUTPUT CABLE TO SPEAKER
5. PLUG CABLE INTO INPUT ON FADER
6. PLUG INPUT CABLE INTO TURNTABLE
7. PLUG IN AUX CABLE INTO FADER
8. PLUG IN AUX CABLE INTO PHONE OR MEDIA PLAYER.