

Numark in Music




PT01 Scratch Control Assembly Board


Part number: TWPC16P00701


Points to note about installing the Control Assembly Board as a replacement for your current damaged or faulty board.

Disconnect the white 'ribbon' cable plug from underneath the board, which is used to connect to your PT01 Scratch 'switch' or 3rd Party 'fader'.

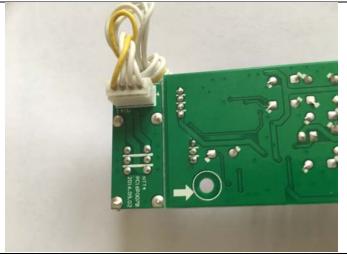

Turn the board over, un-wind the white 'ribbon' cable and snap off the surplus switchboard, which can be disposed of. Take off all three of the rotary knobs from your damaged/faulty board and place on the new PT01 Scratch Control Assembly Board.

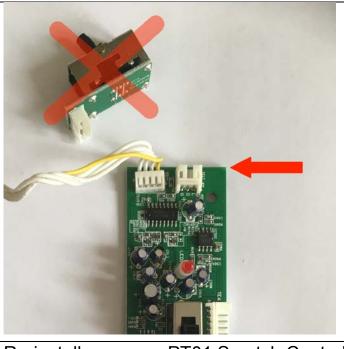

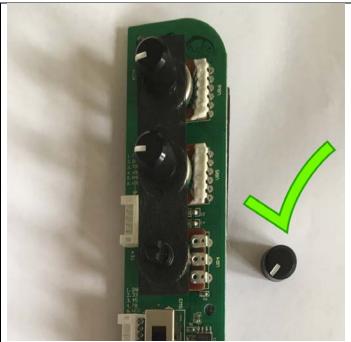

Re-install your new PT01 Scratch Control Assembly Board.