


JDDX2R-SP, JDDX2R-SX & JDDX2R-KG


CUT IN ADJUSTMENTS

TO ADJUST CUT, USE SMALL FLAT SCREW DRIVER TO TURN TRIMMERS.


- 1** MOVE FADER ALL THE WAY TO THE RIGHT. SLOWLY TURN BOTH TRIMMERS TO THE RIGHT (CW) UNTIL THEY STOP

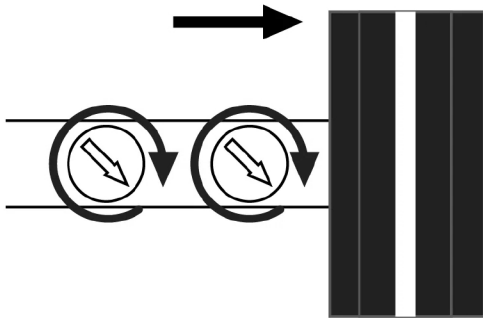


- 2** PLAY AUDIO AND SLOWLY TURN RIGHT TRIMMER TO THE LEFT (CCW) UNTIL AUDIO CUTS OFF. THIS IS THE RIGHT SIDE CUT-IN POINT.

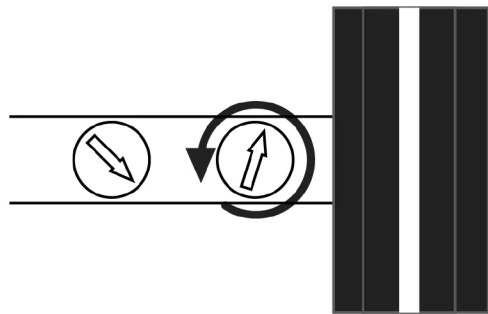

- 3** MOVE FADER ALL THE WAY TO THE LEFT.

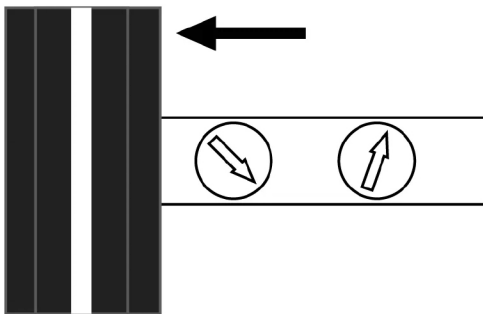

- 4** PLAY AUDIO AND SLOWLY TURN LEFT TRIMMER TO THE LEFT (CCW) UNTIL AUDIO CUTS OFF. THIS IS THE LEFT SIDE CUT-IN POINT.

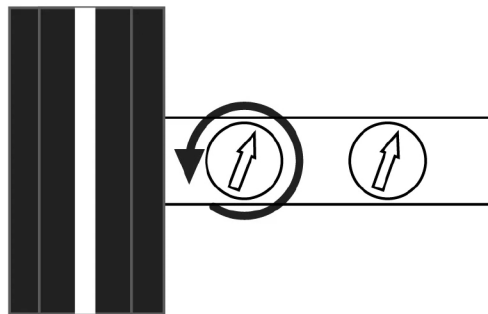

*** YOU CAN TURN TRIMMER MORE LEFT (CW) AFTER CUT POINT.
THIS WILL MAKE THE CUT GAP WIDER.
TURNING CW TO FAR WILL MAKE THE FADER STAY IN CUT / MUTE.
SET TO DESIRED GAP.**